



Count on Encore's 30 Years of Experience

Encore Mini Cranes

Hybrid options for indoor/outdoor applications.

Transformers available.



Mini crawler cranes go to work where the work is, safe and efficiently.



Goes through ANY doorway and on most commercial elevators.

Gets into areas with tight or limited accessibility.



Great for construction, landscape, and contractor applications.



Encore has certified operators available if required:

- Lifting • Hauling • Rigging
- Specializing in heavy and challenging hoist work.



Encore Trucking & Transport Ltd.

12011-32 St. N.E. Edmonton, AB, T6S 1G8

Phone: 780-463-5057

Fax: 780-463-2577 Toll Free: 877-463-5057

contact@encoretrucking.ca

www.encoretrucking.ca



Tracko
All-Terrain Dollies



12011-32 St. N.E.
Edmonton, AB, T6S 1G8
Fax: 780-463-2577
contact@encoretrucking.ca
www.encoretrucking.ca

Phone: 780-463-5057
Toll Free: 877-463-5057


We Rent, Operate and Sell Mini Crawler Cranes

A Powerful Lifting Tool for Tight Spaces

Starting at only 24" wide, our **MINI CRANES** can get into those tight spots where you need power and lift.



Crane Elevations

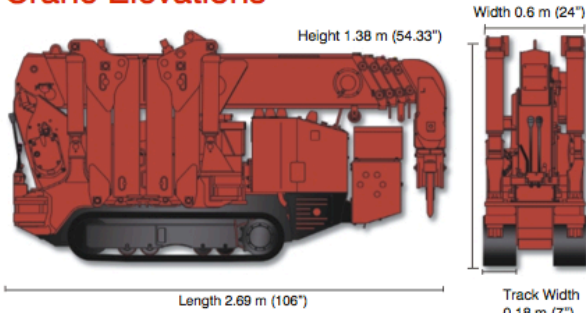

- Level operation on uneven sites.
- Same day orientation.
- Hybrid options for indoor/outdoor application.
- Radio remote controls.
- Equipped with LMI Stability Safeguards and Shutdowns.
- Fully Certified.
- Jib for limited headroom, cold weather start. (other accessories available).
- Smooth running rubber crawler treads.



CHART OF RATED LOAD MODEL 295 MINI CRANE

RATED LOADS

BOOM SECTION	1	1+2							
WORKING RADIUS (FT)	3.0	4.5	5.0	6.0	7.0	8.0	10.0	11.0	12.58
RATED LOAD (LBS)	6450	6450	5850	4950	4350	3800	2850	2450	2000
MAX EXT. OUTRIGGERS	4450	4450	4450	3150	2250	1600	1100	950	600
NOT MAX EXT. OUTRIGGERS									

BOOM SECTION	1 + 2 + 3								
WORKING RADIUS (FT)	7.0	8.0	9.5	10.0	11.0	12.0	14.0	15.0	17.62
RATED LOAD (LBS)	3050	3050	3050	2750	2450	2150	1650	1450	1000
MAX EXT. OUTRIGGERS	1850	1550	1250	1150	1000	850	600	550	300
NOT MAX EXT. OUTRIGGERS									

BOOM SECTION	1 + 2 + 3 + 4								
WORKING RADIUS (FT)	11.0	12.5	13.0	15.0	16.0	17.0	18.0	20.0	22.61
RATED LOAD (LBS)	1950	1950	1750	1350	1200	1100	1000	850	660
MAX EXT. OUTRIGGERS	1000	800	750	600	510	450	370	280	200
NOT MAX EXT. OUTRIGGERS									

BOOM SECTION	1 + 2 + 3 + 4 + 5									
WORKING RADIUS (FT)	12.5	13.5	15.0	16.0	18.0	19.0	21.0	23.0	25.0	27.59
RATED LOAD (LBS)	1280	1280	1050	920	750	700	590	500	440	350
MAX EXT. OUTRIGGERS	850	700	600	530	420	380	300	220	180	130
NOT MAX EXT. OUTRIGGERS										

! CAUTION RATED LOADS

- The rated loads show the performance of the crane on level ground and are based on the actual working radiuses including the deflection of boom under load condition. The rated loads are also based on strength and stability of crane.
- "Max extended outriggers" means inner boxes are extended to the maximum extended position and a swing jack pin of each outrigger arm is inserted into the normal position. Other than the above, operate according to figures of "not max ext. outriggers".
- If even one outrigger is not extended, operate according to the figures of "not max. ext. outriggers".
- Improper set-up of outriggers may cause a turnover of the crane. Extend outriggers fully and place them on firm and level ground. Make sure lock pins are inserted properly.
- Boom 1 + 2 + 3 + 4 means boom 4 is extended up to mark.
- Operate according to the figures of 1 + 2 + 3 when boom 3 is extended even a bit. Do according to 1 + 2 + 3 + 4 when boom 4 is extended even a bit. Do according to 1 + 2 + 3 + 4 + 5 when mark in the side of boom 4 moves away from boom 3 even a bit.



Toll Free: 877-463-5057



Gets into areas with tight or limited accessibility



Jib Attachment for extra headroom



Great for construction, landscape, and contractor applications



Manbasket Attachment